



ISO 9001 : 2008



Section 08326

THERMOSTOP INC., 3775 Losch, Longueuil, Québec, Canada, J3Y 5T7, Tél. : (450) 678-8666, Fax. : (450) 678-7765

MAINTENANCE INSTRUCTIONS

Glace-Guard Impact Traffic

To ensure safe and proper operation of your door and hardware, periodic maintenance is a must. As the old saying goes, *"An ounce of prevention is worth a pound of cure."* The following procedures are part of a recommended maintenance program designed to ensure long term reliability at a relatively low cost.

DOOR PANEL:

- Inspect the door panel(s). Remove any rusting surface (due to scratches and dents) and perform required touch-up paint.
- Depending on the environment conditions, wash the door (on a regular basis, but at least once a year) with a mild liquid detergent (dish detergent). Rinse thoroughly the door with water. Once a year, wax your door with a liquid car wax to protect the paint luster.
- Visually inspect the panel(s) perimeter U-shaped seal. Adjust or replace as required.

HARDWARE ACCESSORIES:

- Inspect the door top hinge(s) and the bottom pivot(s).
- Ensure they are clean and free of dust or any type of deposit. Lubricate if required with 10W30 motor oil.
- Tighten all loose parts.