





THERMOSTOP INC., 3775 Losch, Longueuil, Québec, Canada, J3Y 5T7, Tél.: (450) 678-8666, Fax.: (450) 678-7765

MAINTENANCE INSTRUCTIONS Glace-Guard Entrance

To ensure safe and proper operation of your door and hardware, periodic maintenance is a must. As the old saying goes, "An ounce of prevention is worth a pound of cure." The following procedures are part of a recommended maintenance program designed to ensure long term reliability at a relatively low cost.

DOOR PANEL:

- Inspect the door panel(s). Remove any rusting surface (due to scratches and dents) and perform required touch-up paint.
- Depending on the environment conditions, wash the door (on a regular basis, but at least once a year) with a mild liquid detergent (dish detergent). Rinse thoroughly the door with water. Once a year, wax your door with a liquid car wax to protect the paint luster.
- Visually inspect the perimeter magnetic seal. Ensure it is clean and free of any type of deposit. Adjust or replace as required.
- Visually inspect the blade bottom seals. Adjust or replace as required.

HARDWARE ACCESSORIES:

- Inspect the door hinges, the handle and the mechanical closer.
- Ensure they are clean and free of dust or any type of deposit.
- > Tighten all loose parts.